

GENERAL CARE

 Before first use, and as soon as possible after each use wash all parts with warm, soapy water. Rinse all parts thoroughly and allow time to dry. Store with stopper off.

soapy water. Rinse all parts thoroughly with clean water. Allow all parts to dry completely prior to next use or storage.

• DO NOT use abrasive soaps, scouring pads, brushes, or other objects to clean inside of container.

 DO NOT use abrasive cleaners or scrubb to clean outside of product since the dull finish.

· This product is top-rack dishwasher so

hot water that may affect the appearance your product.

Residual liquids, foods, or other contents may h as lid parts, container parts, gaskets

that these parts of the product are thoroughly cleaned.

 For maximum thermal efficiency, preheat or pre-chill the product just prior to use. Fill with minutes and empty water. After filling container with contents, re-cover with lid to increa. thermal efficiency. Never use a conventional oven, or other heat source this purpose.

ASSEMBLY & USE TWIST-AND-POUR STOPPER

Remove stopper (A) by twisting counterclockwis Remove gasket(s) (B and B1) from underside of stopper (A). 3. Wash all parts separately then re-assemble. Ensure gasket(s) (B and B1) are properly seated to minimize leaking. 4. Fill container (C) with contents. Do not overfill: Leave space for the stopper (A), to av overflow.

6. To pour, twist stopper (A) counterclockwise 1/2

to pour. Note: Stopper does not need to b removed completely to pour contents.

7. Re-tighten stopper (A) by twisting clockwise

WARNINGS

 DO NOT use product in microwave, on a drip coffee maker, on stove-top, or in a type of oven.

 NOT RECOMMENDED FOR USE BY CHILDREN: Keep out of the reach of children, especially when product contains hot cont which may burn or scald user.

- Always test temperature of contents before consuming.
- DO NOT look directly into product when fill keep at arm's length

top of container for lid and stopper (if present), to avoid overflow. Hot contents may burn or scald user if overflow occurs.

Check periodically to make sure any gasket (flexible band around lid and/or stopp present and properly positioned to prevent contents from passing through lid when is closed (if applicable to product). Missi worn or misaligned gasket may cause pro to leak. Leakage of hot contents may but or scald user.

 This product is "FOR TABLE TOP USE ONLY", DO NOT use this product to transport liquids an upright position.

In general, contents should not be left in the container for longer than 24 hours. However, the rate at which contents spoil depends on several factors. Certain contents that include,

- It you are unable to open container by hand do not open it and dispose of it at your loc waste facility.
- DO NOT use to store or carry carbonated drinks or dry ice. This may cause lid/stopper and contents to eiect forcefully or leak.

open the container, ENSURE THE OPENIT POINTED AWAY FROM THE USER OR O PERSONS TO AVOID INJURY. · DO NOT use tools or devices to force container to open.

oil sooner. Proceed with caution when usi the product with quick spoiling contents.

· If contents are left in the container longer than 24 hours, or you suspect spoilage, use caution when opening the container. Contents spoilage can cause pressure inside the container to build, possibly leading to the forceful ejection of the stopper or contents.

THERMOS BRAND QUALITY GUARANTEE

is guarantee is warranted by alfi GmbH Germany. The Thermos brand quality guaran claims. Thermos insulated containers conform to the currently valid European standard DIN EN 12546.

bottle if returning in the event of a complaint.

improper handling. The guarantee also becomes invalid in case of faults or defects arising from repairs and/or modifications carried out I unauthorised third parties.

4042 Carafe