



DE Benutzerhinweise Isolierflasche

Vor dem ersten Gebrauch mit heißem Wasser und etwas Spülmittel ausspülen und gut belüftet trocknen lassen. Nach jedem Gebrauch Speisegeräß und Verschluss mit warmem Wasser und etwas Spülmittel ausspülen, trocknen lassen und stets geöffnet aufbewahren.

Alle Teile sind Top-Rack spülmaschinengeeignet. Es wird die Reinigung von Hand empfohlen. Außen ein feuchtes weiches Tuch verwenden, keine kratzenden Bürsten oder Scheuerschwämme! Für hartnäckige Verschmutzungen empfehlen wir Natron in heißem Wasser aufzulösen und über Nacht im Gefäß zu belassen. Gefäß dabei nicht verschließen. Nicht ins Wasser eintauchen, keine Bleichmittel oder chlorhaltige Reiniger verwenden.

Zum Befüllen Deckel vollständig abschrauben, danach wieder zuschrauben. Dieses Gefäß

ist absolut dicht. Gefäß max. 2 cm bis zur Unterkante des Gefäßes befüllen. Die optimale Isolierleistung wird durch vorheriges Ausspülen mit kaltem Wasser bei kalten Getränken oder mit heißem Wasser bei heißen Getränken erzielt. Achtung, nicht auf der Herdplatte, im Backofen oder der Mikrowelle vorwärmen.

Bedienung des Automatikverschlusses

1. Der Automatikverschluss lässt sich durch eine Drehbewegung in zwei Teile zerlegen.
2. Bitte überprüfen Sie vor jeder Benutzung, ob beide Teile des Verschlusses dicht miteinander verschraubt sind.
3. Durch Druck auf den Button "OPEN" öffnet sich der Verschluss.
4. Durch Druck auf den Button "CLOSE" wird der Verschluss geschlossen.
5. Für die Reinigung muss der Verschluss zerlegt werden. Dafür den oberen Teil, anhand der Griffmulden, gegen den Uhrzeigersinn drehen.

6. Zum Befüllen wird der komplette Verschluss gegen den Uhrzeigersinn aus der Flasche gedreht.

Nach dem Füllen, die Flasche mit dem Automatikverschluss und dem Trinkbecher gut Verschließen.

Sicherheitshinweise: Nur unter Aufsicht eines Erwachsenen verwenden. Nicht unbeaufsichtigt in Kinderhänden lassen. Um die Verletzungsgefahr zu vermeiden, sollten Kinder mit dem Produkt nicht rennen oder gehen. Keine Milchprodukte oder Babynahrung warmhalten, Gefahr von Bakterienwachstum! Keine Eismwürfel, Trockeneis oder kohlenensäurehaltige Getränke. Gefäß nur für Lebensmittel geeignet. Leicht verderbliche Produkte sollten nicht länger als notwendig im Gefäß verbleiben. Trinken Sie nie direkt aus dem Gefäß und füllen Sie es nicht zu voll: **Verbrühungsgefahr!**

THERMOS® QUALITÄTSGARANTIE

Diese Garantie wird durch die alfi GmbH Deutschland gewährt. Neben den länderspezifischen Gewährleistungsansprüchen gilt die Thermos Qualitätsgarantie. Thermos Isoliergefäße entsprechen der gültigen europäischen Norm DIN EN 12546. alfi gewährt ab Kaufdatum 2 Jahre Garantie auf Material und Verarbeitung und 5 Jahre auf die Isolierleistung. Bitte bewahren Sie den Kaufbeleg auf! Im Falle einer Reklamation wenden Sie sich bitte an den Händler, bei dem das Produkt erworben wurde. Bitte bewahren Sie den Kaufbeleg auf, dieser wird zwingend für die Abwicklung benötigt. Auf selbst verursachte Schäden, die auf unsachgemäße Handhabung zurückzuführen sind, besteht kein Garantieanspruch. Die Garantieverpflichtung erlischt ebenfalls, wenn Fehler oder Mängel entstehen, die auf Reparaturen und Abänderungen durch nicht autorisierte Dritte zurückzuführen sind.

alfi GmbH
Ernst-Abbe-Str. 14
D-97877 Wertheim

thermos.eu

MADE IN CHINA

THERMOS ist eine eingetragene Marke in über 115 Ländern.

EN CARE AND USE

- Before first use, and as soon as possible after each use, wash all parts with warm, soapy water. Rinse thoroughly and allow time to dry.
- The container should be periodically cleaned. The best results are obtained using a mixture of water and bicarbonate of soda or washing up liquid. Rinse thoroughly afterwards. DO NOT put the stopper/lid on whilst using this cleaning method. Soaking overnight produces excellent results. Always rinse before re-use.
- All parts are top rack dishwasher safe; however, hand washing is recommended for best results.
- DO NOT immerse in water.
- DO NOT use abrasive cleaners or scrubbers since they may dull the finish.
- DO NOT use bleach or cleaners containing chlorine on any parts of the product.
- Pre-heat or pre-cool the container with water

alfi GmbH
Ernst-Abbe-Str. 14
D-97877 Wertheim

thermos.eu

MADE IN CHINA

THERMOS is a registered trademark in over 115 countries.

part counterclockwise.

To remove the stopper for filling, twist the outer stopper only counterclockwise

After filling, always ensure outer cup and both inner and outer stoppers are securely closed.

CAUTION

- Use only with adult supervision when product contains hot liquids or hot foods – hot liquids or hot foods can scald user.
- Never leave child unattended while using this product.
- To avoid possible injury, do not let child walk or run with product.
- Always test temperature of food or liquid before feeding to your child.
- DO NOT overfill product. Hot liquids or foods can scald user.
- DO NOT drink directly from the product or from the stopper.
- Check the stopper periodically. A worn stopper may cause the product to leak.

6. To remove the stopper for filling, twist the outer stopper only counterclockwise

After filling, always ensure outer cup and both inner and outer stoppers are securely closed.

CAUTION

- Use only with adult supervision when product contains hot liquids or hot foods – hot liquids or hot foods can scald user.
- Never leave child unattended while using this product.
- To avoid possible injury, do not let child walk or run with product.
- Always test temperature of food or liquid before feeding to your child.
- DO NOT overfill product. Hot liquids or foods can scald user.
- DO NOT drink directly from the product or from the stopper.
- Check the stopper periodically. A worn stopper may cause the product to leak.

7. After filling, always ensure outer cup and both inner and outer stoppers are securely closed.

DO NOT use on the stove top.

CAUTION

- Use only with adult supervision when product contains hot liquids or hot foods – hot liquids or hot foods can scald user.
- Never leave child unattended while using this product.
- To avoid possible injury, do not let child walk or run with product.
- Always test temperature of food or liquid before feeding to your child.
- DO NOT overfill product. Hot liquids or foods can scald user.
- DO NOT drink directly from the product or from the stopper.
- Check the stopper periodically. A worn stopper may cause the product to leak.

6. To remove the stopper for filling, twist the outer stopper only counterclockwise

After filling, always ensure outer cup and both inner and outer stoppers are securely closed.

CAUTION

- Use only with adult supervision when product contains hot liquids or hot foods – hot liquids or hot foods can scald user.
- Never leave child unattended while using this product.
- To avoid possible injury, do not let child walk or run with product.
- Always test temperature of food or liquid before feeding to your child.
- DO NOT overfill product. Hot liquids or foods can scald user.
- DO NOT drink directly from the product or from the stopper.
- Check the stopper periodically. A worn stopper may cause the product to leak.

7. After filling, always ensure outer cup and both inner and outer stoppers are securely closed.

DO NOT use on the stove top.

CAUTION

- Use only with adult supervision when product contains hot liquids or hot foods – hot liquids or hot foods can scald user.
- Never leave child unattended while using this product.
- To avoid possible injury, do not let child walk or run with product.
- Always test temperature of food or liquid before feeding to your child.
- DO NOT overfill product. Hot liquids or foods can scald user.
- DO NOT drink directly from the product or from the stopper.
- Check the stopper periodically. A worn stopper may cause the product to leak.

6. To remove the stopper for filling, twist the outer stopper only counterclockwise

After filling, always ensure outer cup and both inner and outer stoppers are securely closed.

CAUTION

- Use only with adult supervision when product contains hot liquids or hot foods – hot liquids or hot foods can scald user.
- Never leave child unattended while using this product.
- To avoid possible injury, do not let child walk or run with product.
- Always test temperature of food or liquid before feeding to your child.
- DO NOT overfill product. Hot liquids or foods can scald user.
- DO NOT drink directly from the product or from the stopper.
- Check the stopper periodically. A worn stopper may cause the product to leak.

7. After filling, always ensure outer cup and both inner and outer stoppers are securely closed.

DO NOT use on the stove top.

CAUTION

- Use only with adult supervision when product contains hot liquids or hot foods – hot liquids or hot foods can scald user.
- Never leave child unattended while using this product.
- To avoid possible injury, do not let child walk or run with product.
- Always test temperature of food or liquid before feeding to your child.
- DO NOT overfill product. Hot liquids or foods can scald user.
- DO NOT drink directly from the product or from the stopper.
- Check the stopper periodically. A worn stopper may cause the product to leak.

6. To remove the stopper for filling, twist the outer stopper only counterclockwise

After filling, always ensure outer cup and both inner and outer stoppers are securely closed.

CAUTION

- Use only with adult supervision when product contains hot liquids or hot foods – hot liquids or hot foods can scald user.
- Never leave child unattended while using this product.
- To avoid possible injury, do not let child walk or run with product.
- Always test temperature of food or liquid before feeding to your child.
- DO NOT overfill product. Hot liquids or foods can scald user.
- DO NOT drink directly from the product or from the stopper.
- Check the stopper periodically. A worn stopper may cause the product to leak.

7. After filling, always ensure outer cup and both inner and outer stoppers are securely closed.

DO NOT use on the stove top.

CAUTION

- Use only with adult supervision when product contains hot liquids or hot foods – hot liquids or hot foods can scald user.
- Never leave child unattended while using this product.
- To avoid possible injury, do not let child walk or run with product.
- Always test temperature of food or liquid before feeding to your child.
- DO NOT overfill product. Hot liquids or foods can scald user.
- DO NOT drink directly from the product or from the stopper.
- Check the stopper periodically. A worn stopper may cause the product to leak.

6. To remove the stopper for filling, twist the outer stopper only counterclockwise

After filling, always ensure outer cup and both inner and outer stoppers are securely closed.

CAUTION

- Use only with adult supervision when product contains hot liquids or hot foods – hot liquids or hot foods can scald user.
- Never leave child unattended while using this product.
- To avoid possible injury, do not let child walk or run with product.
- Always test temperature of food or liquid before feeding to your child.
- DO NOT overfill product. Hot liquids or foods can scald user.
- DO NOT drink directly from the product or from the stopper.
- Check the stopper periodically. A worn stopper may cause the product to leak.

7. After filling, always ensure outer cup and both inner and outer stoppers are securely closed.

DO NOT use on the stove top.

CAUTION

- Use only with adult supervision when product contains hot liquids or hot foods – hot liquids or hot foods can scald user.
- Never leave child unattended while using this product.
- To avoid possible injury, do not let child walk or run with product.
- Always test temperature of food or liquid before feeding to your child.
- DO NOT overfill product. Hot liquids or foods can scald user.
- DO NOT drink directly from the product or from the stopper.
- Check the stopper periodically. A worn stopper may cause the product to leak.

6. To remove the stopper for filling, twist the outer stopper only counterclockwise

After filling, always ensure outer cup and both inner and outer stoppers are securely closed.

CAUTION

- Use only with adult supervision when product contains hot liquids or hot foods – hot liquids or hot foods can scald user.
- Never leave child unattended while using this product.
- To avoid possible injury, do not let child walk or run with product.
- Always test temperature of food or liquid before feeding to your child.
- DO NOT overfill product. Hot liquids or foods can scald user.
- DO NOT drink directly from the product or from the stopper.
- Check the stopper periodically. A worn stopper may cause the product to leak.

7. After filling, always ensure outer cup and both inner and outer stoppers are securely closed.

DO NOT use on the stove top.

CAUTION

- Use only with adult supervision when product contains hot liquids or hot foods – hot liquids or hot foods can scald user.
- Never leave child unattended while using this product.
- To avoid possible injury, do not let child walk or run with product.
- Always test temperature of food or liquid before feeding to your child.
- DO NOT overfill product. Hot liquids or foods can scald user.
- DO NOT drink directly from the product or from the stopper.
- Check the stopper periodically. A worn stopper may cause the product to leak.

6. To remove the stopper for filling, twist the outer stopper only counterclockwise

After filling, always ensure outer cup and both inner and outer stoppers are securely closed.

CAUTION

- Use only with adult supervision when product contains hot liquids or hot foods – hot liquids or hot foods can scald user.
- Never leave child unattended while using this product.
- To avoid possible injury, do not let child walk or run with product.
- Always test temperature of food or liquid before feeding to your child.
- DO NOT overfill product. Hot liquids or foods can scald user.
- DO NOT drink directly from the product or from the stopper.
- Check the stopper periodically. A worn stopper may cause the product to leak.

7. After filling, always ensure outer cup and both inner and outer stoppers are securely closed.

DO NOT use on the stove top.

CAUTION

- Use only with adult supervision when product contains hot liquids or hot foods – hot liquids or hot foods can scald user.
- Never leave child unattended while using this product.
- To avoid possible injury, do not let child walk or run with product.
- Always test temperature of food or liquid before feeding to your child.
- DO NOT overfill product. Hot liquids or foods can scald user.
- DO NOT drink directly from the product or from the stopper.
- Check the stopper periodically. A worn stopper may cause the product to leak.

6. To remove the stopper for filling, twist the outer stopper only counterclockwise

After filling, always ensure outer cup and both inner and outer stoppers are securely closed.

CAUTION

- Use only with adult supervision when product contains hot liquids or hot foods – hot liquids or hot foods can scald user.
- Never leave child unattended while using this product.
- To avoid possible injury, do not let child walk or run with product.
- Always test temperature of food or liquid before feeding to your child.
- DO NOT overfill product. Hot liquids or foods can scald user.
- DO NOT drink directly from the product or from the stopper.
- Check the stopper periodically. A worn stopper may cause the product to leak.

7. After filling, always ensure outer cup and both inner and outer stoppers are securely closed.

DO NOT use on the stove top.

CAUTION

- Use only with adult supervision when product contains hot liquids or hot foods – hot liquids or hot foods can scald user.
- Never leave child unattended while using this product.
- To avoid possible injury, do not let child walk or run with product.
- Always test temperature of food or liquid before feeding to your child.
- DO NOT overfill product. Hot liquids or foods can scald user.
- DO NOT drink directly from the product or from the stopper.
- Check the stopper periodically. A worn stopper may cause the product to leak.

6. To remove the stopper for filling, twist the outer stopper only counterclockwise

After filling, always ensure outer cup and both inner and outer stoppers are securely closed.

CAUTION

- Use only with adult supervision when product contains hot liquids or hot foods – hot liquids or hot foods can scald user.
- Never leave child unattended while using this product.
- To avoid possible injury, do not let child walk or run with product.
- Always test temperature of food or liquid before feeding to your child.
- DO NOT overfill product. Hot liquids or foods can scald user.
- DO NOT drink directly from the product or from the stopper.
- Check the stopper periodically. A worn stopper may cause the product to leak.

7. After filling, always ensure outer cup and both inner and outer stoppers are securely closed.

DO NOT use on the stove top.

CAUTION

- Use only with adult supervision when product contains hot liquids or hot foods – hot liquids or hot foods can scald user.
- Never leave child unattended while using this product.
- To avoid possible injury, do not let child walk or run with product.
- Always test temperature of food or liquid before feeding to your child.
- DO NOT overfill product. Hot liquids or foods can scald user.
- DO NOT drink directly from the product or from the stopper.
- Check the stopper periodically. A worn stopper may cause the product to leak.

6. To remove the stopper for filling, twist the outer stopper only counterclockwise

After filling, always ensure outer cup and both inner and outer stoppers are securely closed.

CAUTION

- Use only with adult supervision when product contains hot liquids or hot foods – hot liquids or hot foods can scald user.
- Never leave child unattended while using this product.
- To avoid possible injury, do not let child walk or run with product.
- Always test temperature of food or liquid before feeding to your child.
- DO NOT overfill product. Hot liquids or foods can scald user.
- DO NOT drink directly from the product or from the stopper.
- Check the stopper periodically. A worn stopper may cause the product to leak.

7. After filling, always ensure outer cup and both inner and outer stoppers are securely closed.

DO NOT use on the stove top.

CAUTION

- Use only with adult supervision when product contains hot liquids or hot foods – hot liquids or hot foods can scald user.
- Never leave child unattended while using this product.
- To avoid possible injury, do not let child walk or run with product.
- Always test temperature of food or liquid before feeding to your child.
- DO NOT overfill product. Hot liquids or foods can scald user.
- DO NOT drink directly from the product or from the stopper.
- Check the stopper periodically. A worn stopper may cause the product to leak.

6. To remove the stopper for filling, twist the outer stopper only counterclockwise

After filling, always ensure outer cup and both inner and outer stoppers are securely closed.

CAUTION

- Use only with adult supervision when product contains hot liquids or hot foods – hot liquids or hot foods can scald user.
- Never leave child unattended while using this product.
- To avoid possible injury, do not let child walk or run with product.
- Always test temperature of food or liquid before feeding to your child.
- DO NOT overfill product. Hot liquids or foods can scald user.
- DO NOT drink directly from the product or from the stopper.
- Check the stopper periodically. A worn stopper may cause the product to leak.

7. After filling, always ensure outer cup and both inner and outer stoppers are securely closed.

DO NOT use on the stove top.

CAUTION

- Use only with adult supervision when product contains hot liquids or hot foods – hot liquids or hot foods can scald user.
- Never leave child unattended while using this product.
- To avoid possible injury, do not let child walk or run with product.
- Always test temperature of food or liquid before feeding to your child.
- DO NOT overfill product. Hot liquids or foods can scald user.
- DO NOT drink directly from the product or from the stopper.
- Check the stopper periodically. A worn stopper may cause the product to leak.

6. To remove the stopper for filling, twist the outer stopper only counterclockwise

After filling, always ensure outer cup and both inner and outer stoppers are securely closed.

CAUTION

- Use only with adult supervision when product contains hot liquids or hot foods – hot liquids or hot foods can scald user.
- Never leave child unattended while using this product.
- To avoid possible injury, do not let child walk or run with product.
- Always test temperature of food or liquid before feeding to your child.
- DO NOT overfill product. Hot liquids or foods can scald user.
- DO NOT drink directly from the product or from the stopper.
- Check the stopper periodically. A worn stopper may cause the product to leak.

7. After filling, always ensure outer cup and both inner and outer stoppers are securely closed.

DO NOT use on the stove top.

CAUTION

- Use only with adult supervision when product contains hot liquids or hot foods – hot liquids or hot foods can scald user.
- Never leave child unattended while using this product.
- To avoid possible injury, do not let child walk or run with product.
- Always test temperature of food or liquid before feeding to your child.
- DO NOT overfill product. Hot liquids or foods can scald user.
- DO NOT drink directly from the product or from the stopper.
- Check the stopper periodically. A worn stopper may cause the product to leak.

6. To remove the stopper for filling, twist the outer stopper only counterclockwise

After filling, always ensure outer cup and both inner and outer stoppers are securely closed.

CAUTION

- Use only with adult supervision when product contains hot liquids or hot foods – hot liquids or hot foods can scald user.
- Never leave child unattended while using this product.
- To avoid possible injury, do not let child walk or run with product.
- Always test temperature of food or liquid before feeding to your child.
- DO NOT overfill product. Hot liquids or foods can scald user.
- DO NOT drink directly from the product or from the stopper.
- Check the stopper periodically. A worn stopper may cause the product to leak.

7. After filling, always ensure outer cup and both inner and outer stoppers are securely closed.

DO NOT use on the stove top.

CAUTION

- Use only with adult supervision when product contains hot liquids or hot foods – hot liquids or hot foods can scald user.
- Never leave child unattended while using this product.
- To avoid possible injury, do not let child walk or run with product.
- Always test temperature of food or liquid before feeding to your child.
- DO NOT overfill product. Hot liquids or foods can scald user.
- DO NOT drink directly from the product or from the stopper.
- Check the stopper periodically. A worn stopper may cause the product to leak.

6. To remove the stopper for filling, twist the outer stopper only counterclockwise

After filling, always ensure outer cup and both inner and outer stoppers are securely closed.

CAUTION

- Use only with adult supervision when product contains hot liquids or hot foods – hot liquids or hot foods can scald user.
- Never leave child unattended while using this product.
- To avoid possible injury, do not let child walk or run with product.
- Always test temperature of food or liquid before feeding to your child.
- DO NOT overfill product. Hot liquids or foods can scald user.
- DO NOT drink directly from the product or from the stopper.
- Check the stopper periodically. A worn stopper may cause the product to leak.

7. After filling, always ensure outer cup and both inner and outer stoppers are securely closed.

DO NOT use on the stove top.

CAUTION

- Use only with adult supervision when product contains hot liquids or hot foods – hot liquids or hot foods can scald user.
- Never leave child unattended while using this product.
- To avoid possible injury, do not let child walk or run with product.
- Always test temperature of food or liquid before feeding to your child.
- DO NOT overfill product. Hot liquids or foods can scald user.
- DO NOT drink directly from the product or from the stopper.
- Check the stopper periodically. A worn stopper may cause the product to leak.

6. To remove the stopper for filling, twist the outer stopper only counterclockwise

After filling, always ensure outer cup and both inner and outer stoppers are securely closed.

CAUTION

- Use only with adult supervision when product contains hot liquids or hot foods – hot liquids or hot foods can scald user.
- Never leave child unattended while using this product.
- To avoid possible injury, do not let child walk or run with product.
- Always test temperature of food or liquid before feeding to your child.
- DO NOT overfill product. Hot liquids or foods can scald user.
- DO NOT drink directly from the product or from the stopper

la norme européenne en vigueur DIN EN 12546. alfi accorde une garantie de 2 ans sur le matériel et la finition à compter de la date d'achat et de 5 ans sur la capacité isolante. En cas de réclamation, veuillez vous adresser au revendeur alfi chez qui vous avez acheté le produit. Veuillez conserver votre ticket de caisse qui sera impérativement nécessaire pour traiter votre demande Les dommages causés par l'acheteur résultant d'une utilisation incorrecte n'ouvrent droit à aucune garantie. L'obligation de garantie s'annule également en cas de défauts ou de vices dus à des réparations ou des modifications effectuées par des tiers non agréés.

IT
USO E MANUTENZIONE

- Prima del primo utilizzo e, il prima possibile, dopo ogni utilizzo, lavare tutte le parti con acqua calda saponata. Sciacquare abbondantemente e lasciar asciugare completamente.
- Il contenitore deve essere pulito periodicamente. I risultati migliori si ottengono utilizzando una miscela di acqua e bicarbonato di sodio oppure detergente liquido per piatti. Poi sciacquare abbondantemente. NON mettere il tappo/ coperchio quando si utilizza questo metodo di pulizia. L'ammollo per una notte consente risultati eccellenti. Sciacquare sempre prima del successivo utilizzo.
- Non usare mai la lavastoviglie per la pulizia. Si raccomanda il lavaggio a mano per ottenere i migliori risultati.
- NON immergere in acqua.
- NON usare detergenti abrasivi o spugnette

- abrasive, perché la finitura si può sbiadire. NON usare candeggina o detergenti contenenti cloro su nessuna parte del prodotto.
- Pre-riscaldare o pre-raffreddare il contenitore con acqua per garantire un uso efficiente e ridurre il rischio di rottura del riempitore in vetro. Applicare il coperchio, lasciar riposare da 5 a 10 minuti e vuotare. Non usare forni a microonde o tradizionali a questo scopo.
- NON usare sul piano cottura.
- NON usare strumenti o dispositivi per aprire con forza il contenitore.
- Se non siete in grado di aprire il contenitore con la semplice pressione della mano, smaltitelo presso il vostro centro di raccolta rifiuti differenziati.

Per azionare il tappo automatico:

1. Rimuovere la tazza esterna.
2. Controllare sempre accuratamente che sia la parte interna che

- quella esterna del tappo siano ben chiuse.
3. Premere il pulsante su cui è scritto "OPEN" (apri) sulla parte superiore del tappo per aprirlo.
4. Premere il pulsante su cui è scritto "CLOSE" (chiudi) sulla parte superiore del tappo per chiuderlo.
5. Per rimuovere il tappo per eseguire la pulizia, rimuovere entrambe le parti del tappo ruotando ciascuna di esse in senso antiorario.
6. Per rimuovere il tappo per eseguire il riempimento, ruotare soltanto il tappo esterno in senso antiorario
7. Dopo il riempimento, accertarsi che la tazza esterna e sia il tappo interno che quello esterno siano ben chiusi.

ATTENZIONE

- Usare solo sotto la supervisione di un adulto quando il prodotto contiene liquidi o cibi caldi (i liquidi e cibi caldi possono causare

- ustioni all'utente).
- Non lasciare mai i bambini incustoditi mentre usano il prodotto.
- Per evitare eventuali lesioni, non lasciare che i bambini camminino o corrano con il prodotto.
- Verificare sempre la temperatura del cibo e del liquido prima di somministrarlo al bambino.
- NON riempire eccessivamente il prodotto. I liquidi o cibi caldi possono provocare ustioni all'utente.
- NON bere direttamente dal prodotto o dal tappo.
- Controllare il tappo periodicamente. Con un tappo usurato il prodotto può avere perdite. La perdita di liquidi caldi può causare ustioni all'utente.
- Al fine di minimizzare la proliferazione di batteri, non utilizzare per tenere in caldo prodotti a base di latte o alimenti per bambini. Non conservare a lungo all'interno del prodotto alimenti che possono deperire

- con facilità.
- NON usare per riporre o trasportare bevande gassate o ghiaccio secco. Il tappo e il contenuto possono fuoriuscire o essere espulsi fuori con forza.
- Per evitare che tracimi, NON riempitelo oltre la base del coperchio. I liquidi caldi, se tracimano, possono ustionare l'utente.
- In linea generale, gli alimenti e/o bevande non devono essere lasciati nel contenitore oltre le 24 ore. La rapidità con cui deperiscono gli alimenti e/o le bevande dipende, comunque, da svariati fattori. Alcuni alimenti e/o bevande, quali i latticini e alimenti a base di pomodoro e/o le bevande, ad esempio, possono iniziare a deperire prima.
- Se gli alimenti e/o bevande vengono lasciati nel contenitore oltre le 24 ore, o si sospetta che siano deperiti, usare cautela nell'aprire il contenitore. Il deperimento del cibo e/o le bevande può causare pressione all'interno del contenitore al tal punto che il coperchio

- o il contenuto potrebbero essere espulsi con forza. In tali circostanze, prima di cercare di aprire il contenitore, ACCERTARSI DI RIVOLGERE L'APERTURA LONTANO DALL'UTENTE O ALTRE PERSONE PRESENTI, PER EVITARE LESIONI.

Garanzia di qualità thermos

Questa garanzia viene fornita dalla alfi GmbH Germania. Oltre ai diritti di garanzia specifici del Paese si applica anche la garanzia di qualità thermos. I recipienti isolanti thermos sono conformi alla norma europea DIN EN 12546. alfi fornisce una garanzia di 2 anni a partire dalla data di acquisto sul materiale e sulla fabbricazione, e di 5 anni sull'isolamento. Si prega di conservare lo scontrino. In caso di reclamo, si prega di contattare il commerciante presso il quale è stato acquistato il prodotto. Si prega di conservare lo scontrino; questo è strettamente necessario per la gestione della pratica e deve essere inviato insieme all'articolo. Non sussiste alcun diritto di garanzia sui danni

autoprocurati riconducibili ad una manipolazione scorretta. L'obbligo di garanzia decade anche se si presentano danni o difetti riconducibili a riparazioni o modifiche effettuate da terzi non autorizzati.