

**EN GENERAL CARE**

- Before first use, and as soon as possible after each use, wash all parts with warm, soapy water. Rinse all parts thoroughly and allow time to dry.
- Contents should not be left in the container for longer than 24 hours. As soon as possible after each and every use, wash all parts with warm, soapy water. Rinse all parts thoroughly with clean water. Allow all parts to dry completely prior to next use or storage.
- DO NOT use abrasive cleaners or scrubbers since they may scratch the finish.
- DO NOT use bleach or cleaners containing chlorine on any parts of the product.
- This product is top-rack dishwasher safe; however, washing by hand is recommended as the dishwasher uses harsher detergent and hot water that may affect the appearance of your product.
- Residual contents may become trapped between parts, under gaskets (flexible band around lid and/or stopper), or in straws. Although this product is top-rack dishwasher safe, washing by hand is recommended to ensure that these parts of the product are thoroughly cleaned.

**ASSEMBLY & USE**

Food Jar:

1. Remove lid (A) by twisting counterclockwise.
2. Remove spoon (D) (if present) by pulling up on it.
3. Remove o-ring gasket (B) from underside of lid (A).


\* Image for reference only; actual product may vary.



Push-Button Spout Bottle:

1. Remove lid (G) by twisting counterclockwise.
2. Press the push-button (D1) on the lid (G) to open lid cover (E).
3. Pull out spout gasket (E1) from underside of lid cover (E) to completely remove it.
4. Pull the straw stem (H) out of bottom of sipper straw (H).
5. Wash all parts separately and re-assemble.

\* Image for reference only; actual product may vary.

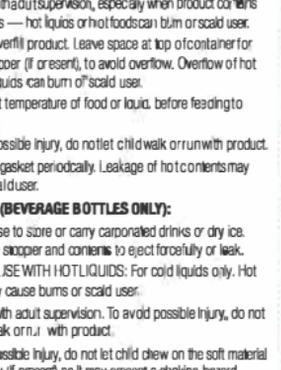

**WARNINGS (FOOD JAR ONLY):**

- Use only with adult supervision, especially when product contains hot contents — hot liquids or hot foods can burn or scald user.
- DO NOT overfill product. Leave space at top of container for lid and stopper (if present), to avoid overflow. Overflow of hot foods or liquids can burn or scald user.
- Always test temperature of food or liquid, before feeding to your child.
- To avoid possible injury, do not let child walk or run with product.
- Check the gasket periodically. Leakage of hot contents may burn or scald user.
- DO NOT use to store or carry carbonated drinks or dry ice. May cause stopper and contents to eject forcefully or leak.
- NOT FOR USE WITH HOT LIQUIDS: For cold liquids only. Hot liquids may cause burns or scald user.
- Use only with adult supervision. To avoid possible injury, do not let child walk or run with product.
- To avoid possible injury, do not let child chew on the soft material of the straw (if present) as it may present a choking hazard.
- Check straw (if present) regularly for tears and replace immediately if damaged or worn.

**WARNINGS (BOTH FOOD JAR AND BEVERAGE BOTTLES):**

- DO NOT use product in microwave, on stove top, or in any type of oven.
- Never leave child unattended while using this product.
- Always test temperature of food or liquid before consuming and before feeding to your child.
- DO NOT overfill the container. Leave space at top of container for lid, straw (if present) and stopper (if present), to avoid overflow.
- Check periodically to make sure any gasket (flexible band around lid and/or stopper) is present and properly positioned to prevent contents from passing through lid when lid is closed. Missing, worn or misaligned gaskets may cause product to leak.
- In general, contents should not be left in container for longer than 24 hours. However, the rate at which contents spoil depends on several factors. Certain contents that include, for example, dairy, homemade soups, and/or tomato may start to spoil much sooner. Also, spoilage may occur faster when contents have been partially consumed. In addition, spoilage may occur sooner with the opening and reclosing of a product holding contents.

**GUARANTEE**

Robust materials make our Thermos® products reliable companions that will last for years to come. A promise: we want to keep without compromise and back up with our THERMOS® guarantee.

all GmbH Isoliergefäße, Metall- und Haushaltswaren (Insulated Containers, Metal and Household Appliances), Ernst-Abbe-Str. 14, 97877 Wertheim, Germany, grants consumers, for the THERMOS® range, a two-year warranty on material and workmanship as well as a five-year warranty on insulation performance. (does not apply to ThermoCafé products).

For the purpose of this warranty, "consumers" are deemed to be any natural person who owns a THERMOS® product and did not purchase it for resale or within the context of their commercial business or freelance work.

This warranty applies exclusively to products purchased in Germany and Austria. The warranty period shall commence as of the date of the purchase receipt for the product, however no earlier than on the date the product was received. The warranty is only valid for original end consumers, meaning consumers who were first to purchase the product from the manufacturer, from a dealer or from another natural or legal person who resells THERMOS® products within the context of their commercial business or freelance work.

In the case of a valid warranty claim, we may choose between providing a cost-free repair or cost-free delivery of a replacement part or a product of the same type. If the affected product is no longer manufactured, we reserve the right to supply a replacement product from our range that is as close as possible to the defective product. There shall be no further claims in excess of this.

**FR ENTRETIEN GÉNÉRAL**

- Avant la première utilisation et le plus tôt possible après chaque utilisation, laver tous les composants avec de l'eau chaude savonneuse. Bien rincer tous les composants et les laisser sécher.
- Ne pas laisser d'aliments dans le contenant pendant plus de 24 heures. Dès que possible après chaque utilisation, laver tous les composants avec de l'eau chaude savonneuse. Bien rincer tous les composants à l'eau propre. Laisser le temps à tous les composants de sécher complètement avant de les ranger ou de les réutiliser à nouveau.
- NE PAS utiliser de produits nettoyants abrasifs ni de grattoirs, car ils pourraient rayer le fini.
- NE PAS utiliser de javellissants ou de produits nettoyants chlorés sur aucune partie du produit.
- Ce produit va au lave-vaisselle, dans le panier du haut. Il est toutefois recommandé de le laver à la main, car l'eau très chaude et les détergents forts utilisés dans le lave-vaisselle pourraient altérer l'apparence du produit.

**ASSEMBLAGE ET UTILISATION**

Contenant à aliments :

1. Retirer le couvercle (A) en tournant dans le sens antihoraire.
2. Retirer le joint torique (B) à l'intérieur du couvercle (A).
3. Laver tous les composants séparément, puis remettre en place le joint torique (B), le côté plat face au couvercle (A).
4. Remplir la bouteille de liquide. Ne pas trop remplir : Prévoir de l'espace pour le couvercle (A) pour éviter les débordements.

\* Illustration pour référence seulement; le produit réel peut varier.



Bouteille avec bec à bouton-poussoir :

1. Retirer le couvercle (D) en tournant dans le sens antihoraire.
2. Appuyer sur le bouton-poussoir (G1) du couvercle (D) pour ouvrir le capuchon (E) du couvercle.
3. Tirer sur le joint d'étanchéité (E1) du bec à l'intérieur du capuchon (E) du couvercle (D) pour l'extraire complètement.
4. Retirer le joint torique (F) à l'intérieur du couvercle (D).
5. Laver tous les composants séparément et réassembler.

\* Illustration pour référence seulement; le produit réel peut varier.



If a claim arising from the warranty is met, this does not prolong the warranty period nor does a new warranty period begin, and statutory warranty claims do not arise from warranty claims met.

**EXCLUSION OF WARRANTY:**

all GmbH will not accept a warranty claim for damage caused by the consumer as a result of improper handling. The guarantee also becomes invalid in case of faults or defects arising from repairs and/or modifications implemented by unauthorised third parties. Moreover, all GmbH will also not accept a warranty for broken glass or capillary breakage. Wear parts, such as seals, plugs and lids as well as accessory items such as coffee filters, tea filters and cleaning accessories, are also excluded from the warranty.

Please note: The customer's right to claim for defects in accordance with the law of the country in which the product was purchased is unaffected by the voluntary warranty of all GmbH.

**AVERTISSEMENTS (CONTENANT À ALIMENTS SEULEMENT):**

- La supervision d'un adulte est requise, particulièrement lorsque le contenu du produit est chaud - les liquides ou les aliments chauds peuvent brûler l'utilisateur.
- NE PAS trop remplir le produit. Prévoir un espace suffisant au haut du contenant pour le couvercle et le bouchon (le cas échéant), afin d'éviter les débordements. Le débordement d'aliments ou de liquides chauds peut causer des brûlures à l'utilisateur.
- Toujours vérifier la température de l'aliment ou du liquide avant de le servir à un enfant.
- Pour éviter les risques de blessures, ne pas laisser un enfant marcher ou courir avec le produit.
- Vérifier le joint d'étanchéité périodiquement. Les fuites de contenu chaud pourraient causer des brûlures à l'utilisateur.

**AVERTISSEMENTS BOUTEILLES À BOISSONS SEULEMENT:**

- NE PAS utiliser PAS pour le transport ou le stockage de boissons gazeuses ou de boissons carboniques. Le bouchon pourrait éclater et le contenu s'échapper.
- NE PAS UTILISER AVEC DES LIQUIDES CHAUDS : Pour les liquides froids seulement. Les liquides chauds pourraient causer des brûlures à l'utilisateur.
- Utiliser uniquement avec la supervision d'un adulte. Pour éviter les risques de blessures, ne pas laisser un enfant marcher ou courir avec le produit.

**AVERTISSEMENTS (CONTENANT À ALIMENTS SEULEMENT):**

- La supervision d'un adulte est requise, particulièrement lorsque le contenu du produit est chaud - les liquides ou les aliments chauds peuvent brûler l'utilisateur.
- NE PAS trop remplir le produit. Prévoir un espace suffisant au haut du contenant pour le couvercle et le bouchon (le cas échéant), afin d'éviter les débordements. Le débordement d'aliments ou de liquides chauds peut causer des brûlures à l'utilisateur.
- Toujours vérifier la température de l'aliment ou du liquide avant de le servir à un enfant.
- Pour éviter les risques de blessures, ne pas laisser un enfant marcher ou courir avec le produit.
- Vérifier le joint d'étanchéité périodiquement. Les fuites de contenu chaud pourraient causer des brûlures à l'utilisateur.

**AVERTISSEMENTS BOUTEILLES À BOISSONS SEULEMENT:**

- NE PAS utiliser de produits nettoyants abrasifs ni de grattoirs, car ils pourraient rayer le fini.
- NE PAS utiliser de javellissants ou de produits nettoyants chlorés sur aucune partie du produit.
- Ce produit va au lave-vaisselle, dans le panier du haut. Il est toutefois recommandé de le laver à la main, car l'eau très chaude et les détergents forts utilisés dans le lave-vaisselle pourraient altérer l'apparence du produit.

**GARANTIE**

Créatives, matériaux très solides, nos produits Thermos® vous accompagneront avec la plus grande fiabilité pendant des années. S'agit-il d'une promesse que nous voulons tenir sans faire de compromis et que nous renforçons par notre garantie THERMOS®.

all GmbH Isoliergefäße, Metall- und Haushaltswaren (réipients isothermes, articles en métal et articles ménagers), Ernst-Abbe-Str. 14, 97877 Wertheim, Allemagne, accorde aux consommateurs, sur sa gamme de produits THERMOS®, une garantie de deux ans sur les matériaux et la fabrication, et une garantie de cinq ans sur les performances isothermes (ne s'applique pas aux produits ThermoCafé®). Dans le cadre de la présente garantie, est considérée « consommateur » toute personne physique qui détient un produit THERMOS® et qui ne l'a pas acheté pour le revendre ni dans le cadre de son activité commerciale ni dans le cadre d'un travail indépendant.

Cette garantie s'applique exclusivement aux produits achetés en Allemagne et en Autriche. La période de garantie commence à compter de la date de réception sur le bon d'achat du produit, mais au plus tôt à la date de réception du produit. La garantie n'est valable que pour les consommateurs finaux d'origine, c'est-à-dire les consommateurs ayant acheté le produit neuf auprès du fabricant, d'un revendeur ou d'une autre personne physique ou morale qui revend des produits THERMOS® dans le cadre de son activité commerciale ou de son travail indépendant.

Si une demande de garantie est valide, nous avons la possibilité de choisir entre accorder la réparation gratuite ou la livraison gratuite d'une pièce de rechange ou d'un produit de même type. Si le produit concerné n'est plus fabriqué, nous nous réservons le droit de fournir un produit de substitut. L'issu de notre garantie sera le plus proche possible du produit défectueux. Au-delà de quoi aucune autre réclamation ne sera recevable.

Si l'un de nos clients n'est pas satisfait à une réclamation réalisée dans le cadre de la garantie, la période de garantie n'en sera nullement prolongée et aucune nouvelle période de garantie n'en sera initiée, et aucune demande de garantie légale ne pourra être faite sur la garantie satisfaisante.

